




Voltage Sensor Installation

Covers Part Number(s):
6521, 6541

Tools Needed:

- 2.0mm hex wrench
- 2.5mm hex wrench

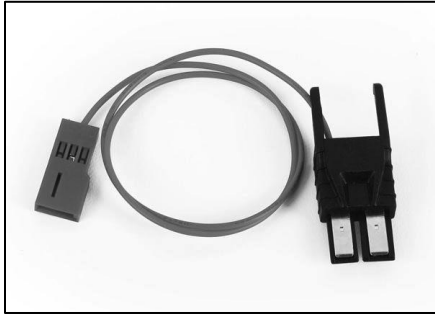

Covers the following vehicles:



- Rustler/Rustler VXL
- Bandit/Bandit VXL
- 2WD Stampede/Stampede VXL
- 2WD Slash/Slash VXL

Required:

- Temp Sensor 6521
- Power Tap 6541

Installation Steps:

1. Remove wire cover and upper receiver box cover (A).
2. Route red female plug from temp sensor (6521) out of receiver box (required for installation).
3. Plug into red female temp sensor connector (B).
4. Reinstall wire cover and upper receiver box cover (add grease to foam pads on receiver box to ensure watertight seal).
5. Connect voltage sensor to battery cable (C).
6. Secure voltage sensor wire to the positive (red) battery cable with tie wrap (included) (D). Cut off excess tie wrap.

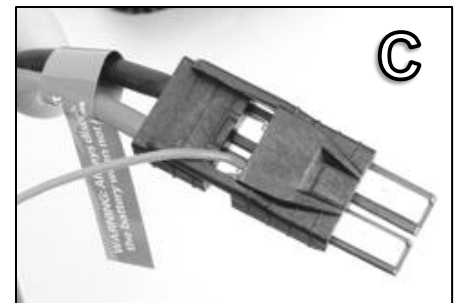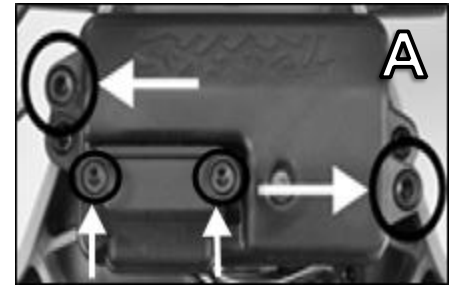

(Vehicle pictured is Rustler VXL. Your model may vary slightly)

If you have questions or need technical assistance, call Traxxas at

1-888-TRAXXAS

(1-888-872-9927) (U.S. residents only)

TRAXXAS.COM

Traxxas, 1100 Klein Road, Plano, TX 75074, Phone: 972-265-8000, Fax: 972-265-8011, e-mail: support@Traxxas.com